



OWNER'S OPERATING AND MAINTENANCE MANUAL



Verō Care Cliner

1-800-237-3377

CHAMPIONCHAIR.COM



IMPORTANT

READ AND FAMILIARIZE YOURSELF WITH ALL INSTRUCTIONS BEFORE USING THIS PRODUCT!

Do NOT install, maintain or operate this equipment without reading and following this manual, otherwise injury and/or damage may result.

IF YOU HAVE ANY QUESTIONS OR CONCERNS, PLEASE CONTACT CHAMPION MANUFACTURING, INC .

Champion assumes no responsibility for damage or injury caused by improper assembly, installation, use, or maintenance of these products.

No part of this manual may be duplicated in any form without the prior consent of Champion Manufacturing, Inc . Unauthorized duplication/distribution of these materials may result in civil prosecution to the maximum extent allowed by law.

The information contained in this manual is subject to change without notice.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE!

These instructions are available online at no charge.
Visit ChampionChair.com to download.

PRODUCTS WITH THE FOLLOWING MARKINGS ARE INTENDED FOR COMMERCIAL USE ONLY:

	 	100-240 VAC 44W, 50-60Hz Supply: 12V  Operating Conditions: 10° - 40° C	WARNING: Long-term, continuous exposure to heat may cause burns. Read instructions before using. DO NOT use wet. DO NOT insert pins into upholstery.
---	--	---	---

	 	100-240VAC, 50-60Hz, 130W Battery Input/Output: 30V/24V  Operating Conditions: 10° - 40° C WARNING: Long-term continuous exposure to heat may cause burns. Read instructions before using. DO NOT use wet. DO NOT INSERT pins into upholstery.
---	--	--

SYMBOLS



FOLLOW INSTRUCTIONS



SYMBOL FOR MANUFACTURER



TYPE B APPLIED PART



PINCH-POINT WARNING



DC VOLTAGE



TRENDELENBURG



GENERAL WARNING

TABLE OF CONTENTS

Intended Use & CPR Statements.....	5
Transportation, Storage, Handling & Disposal	5
PREPARATION: BEFORE YOU BEGIN.....	5
Important Safety Information.....	6
FOR CHAIRS WITH POWERED OPTIONS (Powered Recliner with Heat & Massage, etc.)	7
Isolation Diagram for Heat & Massage Option	8
Schematic Diagram for Power Recliner Option	9
FOR All Configurations (Heat and Massage, etc.).....	10
Assembly Instructions.....	11
Back Assembly.....	11
Armrest Cover Installation (Optional Accessory)	13
Operating Instructions: Attendant.....	15
Caster Operation: Lock/Unlock.....	15
Foot Plate Operation (Optional Feature).....	16
Recline Chair (Attendant Position, Non-Power Recliner Models ONLY)	17
Return Chair to Upright Position (Attendant Position, Non-Power Recliner Models ONLY)	18
Activate Trendelenburg Position (Attendant Only, Non-Power Models ONLY)	19
Return Chair to Recline Position (Attendant ONLY)	19
Recline Chair (Attendant Position, Vero Care Cliner PRCModels ONLY)	20
Return Chair to Upright Position (Attendant Position, Vero Care Cliner PRC Models ONLY).....	21
Activate Trendelenburg Position (Optional Feature, Attendant ONLY, Vero Care Cliner PRC Models ONLY).....	22
Swing-Arm Operation (Attendant ONLY)	23
Patient Transfers Into Chair (Swing-Arm ONLY).....	24
Side Table Operation (Optional Feature)	25
Pivot Table Operation (Optional Feature)	26
Operating Instructions: Occupant.....	27
Recline While In The Seated Position (Non-Power Recliner Models ONLY)	27
Returning To Seated Position (Non-Power Recliner Models ONLY)	28
Recline While In The Seated Position (Vero Care Cliner PRC Models ONLY).....	29
Returning To Seated Position (Vero Care Cliner PRC Models ONLY)	30
Heat/Heat & Massage Operation (Optional Feature)	31
General Maintenance.....	33
Gas Cylinder Operation	33
GENERAL CARE & CLEANING	34
Optional battery	35
Specifications	
Non-Power Models	36
Power Recliner Models.....	37
Verō Care Cliner Options.....	38

INTENDED USE STATEMENT

The Verō Care Cliner is a recliner for use in medical settings. It is designed to provide comfort for patients seated for extended periods of time while receiving clinical treatments such as Dialysis or Infusion or during recovery from surgical procedures where positional adjustments are beneficial. The recliner is also suitable for general use in many medical settings such as, but not limited to, hospital room chair, waiting room chair, convalescent home chair, etc.

TRANSPORTATION, STORAGE, HANDLING & DISPOSAL

- The product should be transported in factory packaging, inside an appropriate medium for the destination, i.e., air/ sea cargo containers.
- The product should be stored in an environment that will inhibit rust/mold formation.
- Champion Manufacturing, Inc recommends not leaving the product in the factory packing in excess of three (3) months.
- The product should always be handled in a manner consistent with the user instructions and in a manner to prevent contamination after each use.
- The product has many recyclable components and to the extent practical, all effort should be used to recycle responsibly. Otherwise the product components shall be disposed of in accordance with local statutes.

PREPARATION: BEFORE YOU BEGIN

1. You should thoroughly read and possess a full understanding of this manual before using this product. It is imperative that all users know how to properly operate all functions and features of this product, including, but not limited to, footplate, casters, swing arms and side table operation and any accessories including Heat, Heat & Massage, and Power Recline.
2. Carefully examine your product for any damage. Be sure to inspect all components.
IF DAMAGE IS EVIDENT, CONTACT FREIGHT CARRIER OR CHAMPION IMMEDIATELY.
3. Remove all packaging material and any hardware that was secured for shipping. Save packaging (see #6 below).
4. Carefully remove all components and any included tools and/or parts from the carton.
5. You may need to cut packaging materials with a box cutter or scissors to access the product. Use **CAUTION** to avoid personal injury or damage to the product.
6. Save all boxes and packaging material until **AFTER** you have assembled your product and have verified that all components are functioning properly. These material are required if it becomes necessary to return the product.
7. Read all hangtags and labels carefully. Hangtags and labels contain pertinent information regarding your product specifically. They may be located on the back of the chair, attached to the handles or chair back.
8. **DO NOT** install, maintain or operate this equipment without reading and following this manual otherwise injury and/or damage may result. **IF YOU HAVE QUESTIONS OR CONCERNS PLEASE CONTACT CHAMPION MANUFACTURING, INC .**

CPR STATEMENT



DO NOT PERFORM CPR IN THIS RECLINER, THE RECLINER SURFACES MAY BE TOO SOFT TO REACH PROPER CHEST COMPRESSION DEPTH.

IMPORTANT SAFETY INFORMATION

FOR PRODUCTS WITH POWERED OPTIONS (HEAT, MASSAGE, ETC.)

When using an electrical appliance, basic precautions should always be followed, including the following:



To reduce the risk of electric shock always unplug this product from the electrical outlet before cleaning, maintenance or servicing.



1. Unplug this product from the electrical outlet when not in use.
2. Supervision should be provided when using this product.
3. Use this product only for its intended use as described in this manual.
4. **DO NOT** use attachments not recommended by the manufacturer.
5. Never operate this product if it has a damaged cord or plug. If it is not working properly; if it has been dropped or damaged or if it has been dropped into water, contact an authorized Champion service center for instructions.
6. **DO NOT** carry or pull this product by power supply cord or use the cord as a handle.
7. Keep the cord away from heated surfaces.
8. **DO NOT** use outdoors.
9. To disconnect, position all controls to the "off" position, then remove the plug from the outlet. Pull the molded plug end only to remove the cord; never pull on the cord only.
10. Clean switch with a damp cloth only – Warranty will be **VOID** if liquid is introduced into switch mechanism(s) or any electrical components.
11. Extension cords are not recommended.
12. **DO NOT** roll recliner or other equipment over the cord and always keep the cord stored properly (see "Cord Storage" on page 32). Proper cord storage is essential in order to prevent damage. Should any cord or any electrical components have any signs of damage, they should be immediately replaced to avoid the possibility of liquid penetration or exposure to current, which can cause further damage to other components, caregivers, or patients.
13. This product is shipped with a 3 pin cord set for North America on a nominal 120 VAC circuit. The product will operate on circuits from 120-240 VAC with a local country power cord equipped with an IEC plug into the controller. If the plug does not fit into the outlet, contact a certified electrician to install the proper outlet. **DO NOT MODIFY THE PLUG IN ANY WAY.** No adapter should be used with this product.
14. For an added level of safety; Champion recommends the use of a 120 volt GFCI (ground fault circuit interrupter) outlet.



1. Never insert pins or attach other metallic fasteners into/onto any part of this chair.
2. **DO NOT** use this product if the covering shows signs of deterioration, such as checking, blistering, or cracking.
3. **KEEP DRY** – Do not operate in a wet or moist condition or environment.

IMPORTANT SAFETY INFORMATION (CONTINUED)

FOR CHAIRS WITH POWERED OPTIONS (HEAT, MASSAGE, POWER RECLINER, ETC.)



1. Long term, continuous exposure to heat may cause burns. It is recommended that skin in contact with heated area be checked for redness and blistering during long term usage. **DO NOT** use on an infant, invalid or incapacitated person. **DO NOT** use on insensitive skin or on a person with poor blood circulation. If you are uncertain if you should use this product, please consult your physician about the use of heat and massage.
2. **DO NOT** crush/pinch heating elements or wiring.


ADDITIONAL INFORMATION FOR VERO CARE CLINER PRC (POWER RECLINER CHAIR) ONLY:

1. The Vero Care Cliner PRC (Power Recliner Chair) uses a linear actuator to drive the recline mechanism inside the chair. The actuator is controlled with a switch panel on the outside of the right hand arm or optionally both arms. A handset can be ordered for convenience of the attendant.
2. The Handset or switch panel should ONLY be used to position the chair recline angle; unless using the Trendelenburg feature, which may be performed manually. Trendelenburg does not require use of the handset switch panel. The Vero Care Cliner PRC may be positioned from full upright to full recline position using the handset or switch panel.
3. NEVER attempt to close the leg rest manually on a Power Chair. The recline motion is controlled by the handset or switch panel; therefore, forcing the chair into a different recline angle will damage the chair and void the warranty.
4. The Vero Care Cliner PRC includes an "AC to DC" switching power supply, operating from a standard AC power outlet (120 VAC/60 Hertz nominal) and a supplemental rechargeable battery (optional). This power supply allows operation world wide on voltages from 100-240 VAC and frequencies from 50-60 HZ with the proper power cord.
5. The (optional) rechargeable battery is a back up system to be used for power outages. Allowing the battery to diminish lower than 30% (see page 35 "Battery Status Indicator") can cause permanent damage to the battery, resulting in the battery no longer being able to hold a full charge. This will void the warranty on the battery.
6. To fully charge the (optional) rechargeable battery for the first time, the Vero Care Cliner PRC must be plugged in for 10 hours. Uncoil the power cable from the back of the Power Reclining Chair and plug it into a properly grounded outlet. Plugging in the Vero Care Cliner PRC initiates the battery to charge. Please refer to the "Power Requirements" on page 9 for further information.
7. Removal of power cord does not stop power function if battery option is present and battery is charged.
8. Always completely deactivate the battery before servicing, transporting, or shipping. Refer to pg. 35 for instructions.
9. Should the battery enclosure be damaged, deformed, or have any sign of leakage, the chair and battery should be taken out of service immediately. Batteries should be disposed of appropriately. Contact your municipal hazardous waste center for instructions. Always handle leaking batteries with gloves.



expectations for typical equipment configuration. Devices qualifying as double insulated require different testing & examination procedures than “Class I Grounded” devices. If your facility requires the product to be tested, be sure to follow testing & examination procedures for “Class II Double-Insulated” devices.


ISOLATION DIAGRAM FOR HEAT & MASSAGE SYSTEM

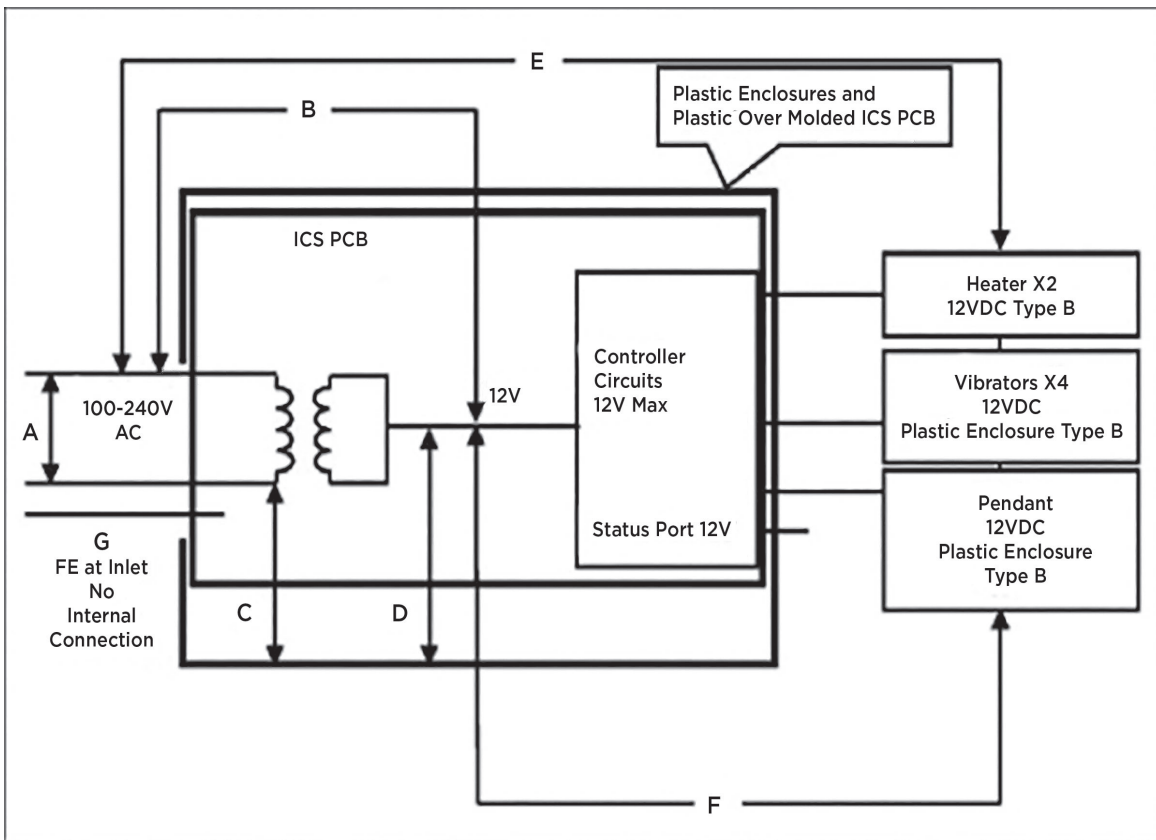

Area	Insulation Type
A	Basic Operational
B	Double Insulated/Reinforced
C	Double Insulated/Reinforced
D	Double Insulated/Reinforced
E	Double Insulated/Reinforced
F	Double Insulated/Reinforced
G	Inlet FE Pin only connects to inlet & pad

 IMPORTANT: PLEASE READ

**FOR VERO CARE CLINER PRC (POWER RECLINER CHAIR) OPTION: SCHEMATIC
DIAGRAM**

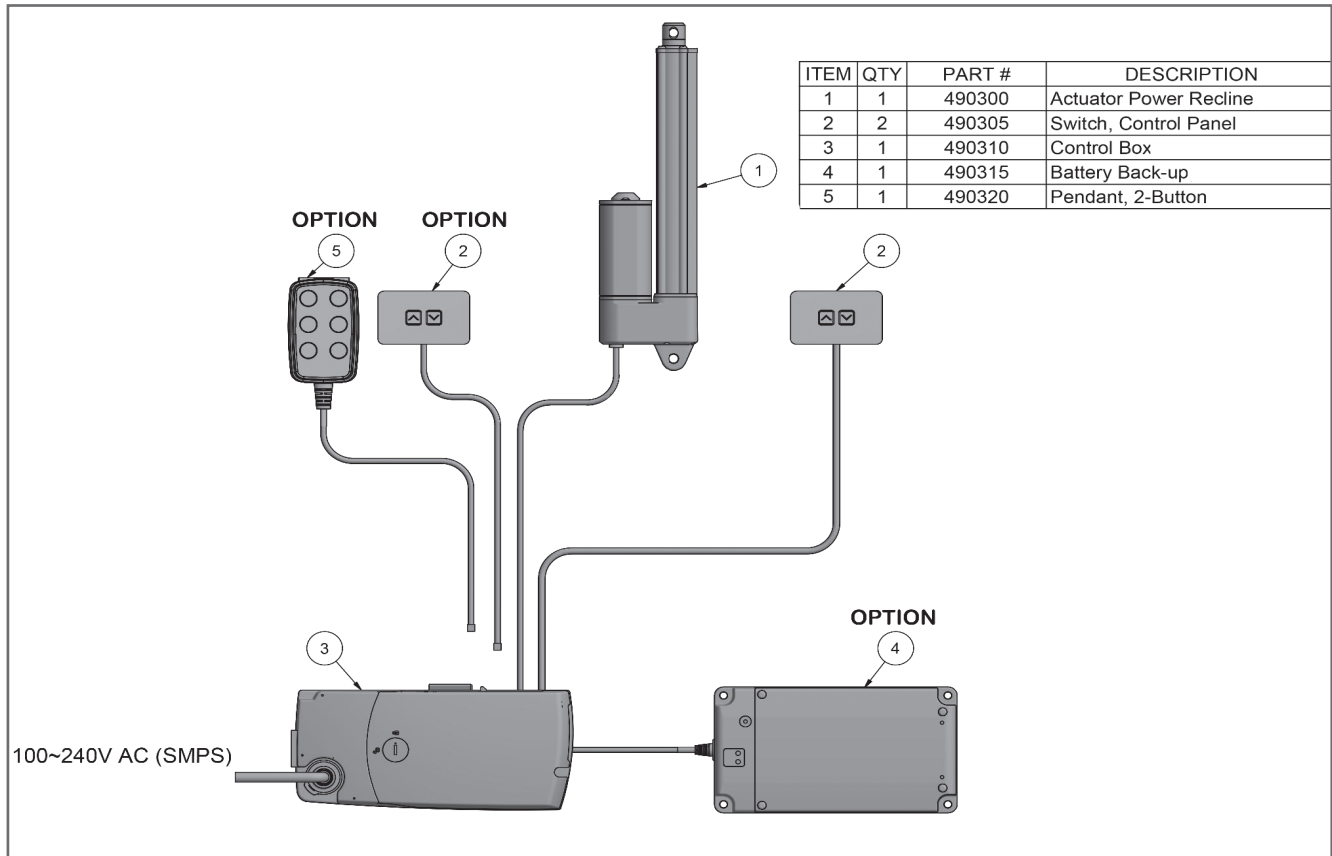

WARNING IMPORTANT: PLEASE READ

FOR ALL CONFIGURATIONS (WITH OR WITHOUT HEAT, MASSAGE, ETC.)

DO NOT Lift or Change Chair Position by Using the Leg rest. This Could Cause Injury to the User or Damage to the Recline Mechanism and will VOID WARRANTY.

1. **READ AND FOLLOW ALL DIRECTIONS.**
2. This is a clinical medical recliner, it is used to position a patient comfortably while receiving various treatment regimens. Care should always be taken to assess an occupant's medical condition **PRIOR** to use of recliner and **PRIOR** to positioning patient in order to determine if this reclining chair is medically appropriate for a specific occupant's use.
3. Keep all extremities clear of the recliner mechanisms when operating the chair with an occupant. Exercise caution while attending to the occupant of the chair. They have the ability to change the position of the chair unexpectedly, which can cause injury.
4. Keep children away from the extended foot support mechanism, from behind the chair, or near any moving parts.
5. **DO NOT** use the recliner if the Trendelenburg Damper and/or Gas Spring is removed or damaged.
6. **DO NOT** put hands, feet or clothing into any openings when changing positions on recliner. Attendant **MUST** confirm that user's arms, legs, hands and feet are safe while changing recliner angle or **SERIOUS INJURY MAY RESULT.**
7. Remove or move chair accessories (i.e. side table, pivot table, etc.) out of the way of occupant's legs when reclining the occupant.
8. **LOCK** casters at all times when the chair is stationary **AND** when an occupant is in the chair. **UNLOCK** casters **ONLY** when moving the chair for any reason.
9. **DO NOT** use recliner for transporting occupant in a vehicle or trailer. Champion recliners have not been tested or approved for use by an occupant in a vehicle or trailer.
10. **DO NOT** use chairs to transport patients unless properly configured with a footplate, push handle, gas back, or power recline option.
11. **NEVER** sit on the chair arms, backrest, or legrest; **SERIOUS INJURY** to user may occur. The chair may be damaged.
12. Periodically check the tightness of all nuts, bolts, and screws at least once every year.
13. Any recliner with broken recline mechanisms, torn upholstery, or other mechanical or visible damage should be immediately removed from service until repaired.
14. **NEVER EXCEED** the recommended weight capacity. Overloading a chair may cause serious damage to user. The chair may be damaged. Overloading the chair voids the warranty.
15. **USE ONLY Champion AUTHORIZED REPLACEMENT PARTS FOR REPAIRS TO THE CHAIR.**
16. Chairs are suitable for indoor use only. Keep this product in a dry environment. Never operate the chair in wet conditions.

WARNING

Use Caution when cleaning near mechanisms. KEEP FINGERS, hands, and all other body parts AWAY FROM moving parts that can cause serious injury.



ASSEMBLY INSTRUCTIONS

BACK ASSEMBLY

1. Lock ALL four (4) casters on chair base with your foot (See "Lock/Unlock Casters").

IMPORTANT: Keep objects and persons clear of the chair before performing step 2.

2. Recline mechanism should be in the upright position. Remove any packaging on the mechanism.
3. Pull up the apron and rear cover on the lower rear of the back, exposing the mounting brackets (A). Lift the upholstered back by its sides while aligning the mounting brackets with the recline mechanism (B).



WARNING

Keep hands clear of connection points or injury may occur.

IMPORTANT:

- It is recommended that **TWO (2) people** be used to complete Step 3-A and 3-B.
- Be careful not to tear or puncture vinyl.

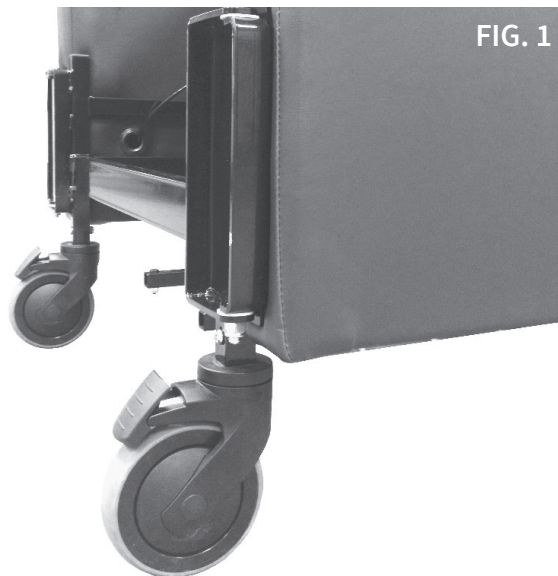


FIG. 1



FIG. 2

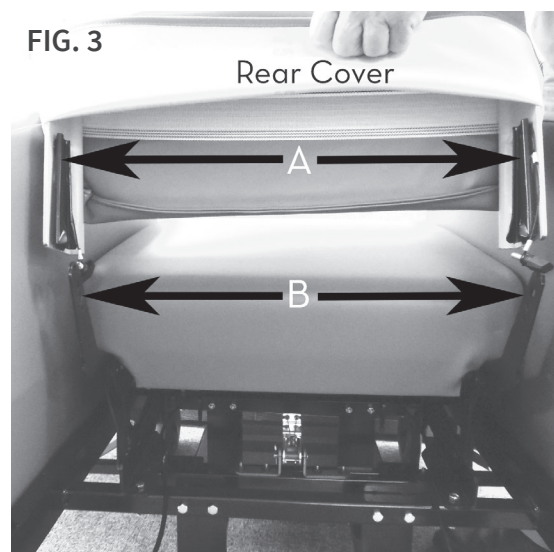


FIG. 3

Rear Cover

A

B

BACK ASSEMBLY - CONTINUED

- Slide the back onto the recline mechanism until the middle hole of the mounting bracket **(A)** is aligned with the middle hole of the recline mechanism arm B **(4)**.

IMPORTANT: It is recommended that two people be used for this step.

- Install knob A (tethered to back) and tighten securely (5).

IMPORTANT: Test the back installation by pulling up on the back. The back should remain securely in place. If the back is loose, check that bracket A has captured arm B and that knob is securely tightened in place (5).

FIG. 4

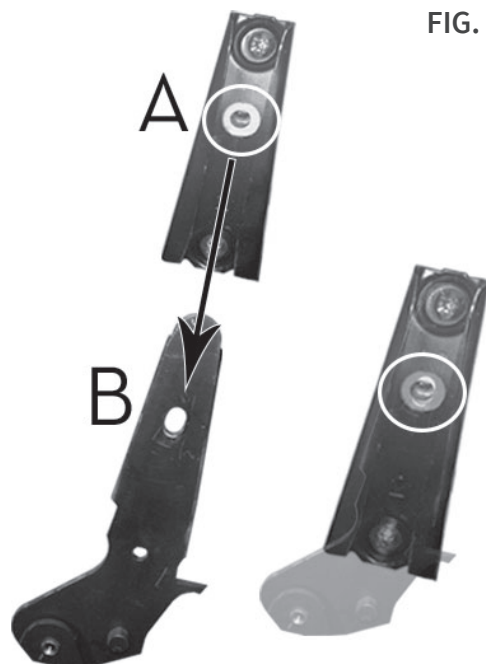


FIG. 5

ARMREST COVER INSTALLATION (OPTIONAL ACCESSORY)

NOTE: Cover designs vary based on chair options (i.e. tables, heat/massage, etc).

CHAIRS WITH SIDE TABLES

1. Raise the side table by grasping the center of the table and gently lift into place.
2. Locate large square opening in cover and position over the side table. Gently stretch the opening over the side table and slide over side table.
3. Fit the front portion of the armrest cover over the front of the arm. Pull down tight for best fit.
4. Fit the rear portion of the armrest cover over the rear of the arm.
5. For the premium table, you will need to release the table slightly to allow space to tuck the apron into the gap. The standard table will have enough room in the upright position.
6. Pull the apron through the gap at the back of the side table completely (premium side table pictured). Smooth out wrinkles.

NOTE: Install right hand cover over right arm and left hand cover over left arm.

FIG. 1

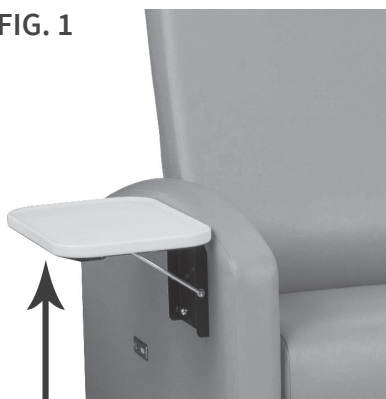


FIG. 2



FIG. 3

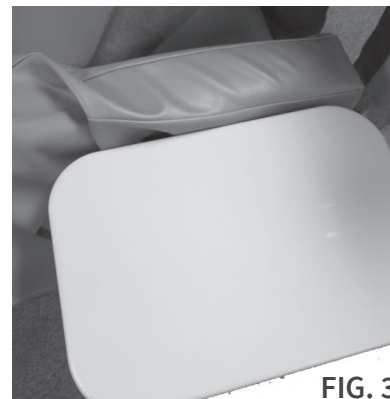


FIG. 4



FIG. 5


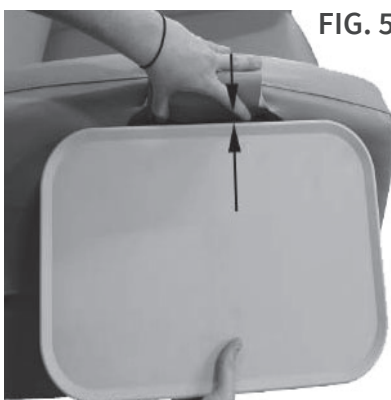




FIG. 6

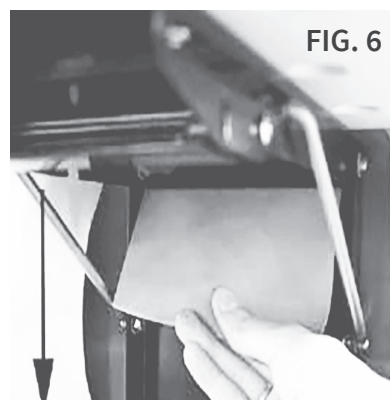

CHAIRS WITH PIVOT TABLES

1. Remove the adjustment knob and the pivot table completely. You **MUST** remove the knob.
2. Pull the arm rest cover down over the chair arm. Ensure the pivot table bracket is inserted through the hole in the arm rest cover.
3. Reinstall the pivot table and adjustment knob.

NOTE: Install right hand cover over right arm and left hand cover over left arm.

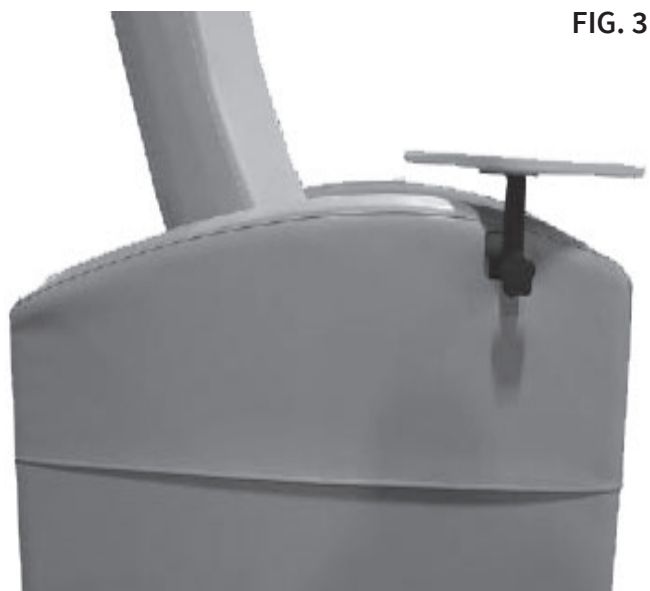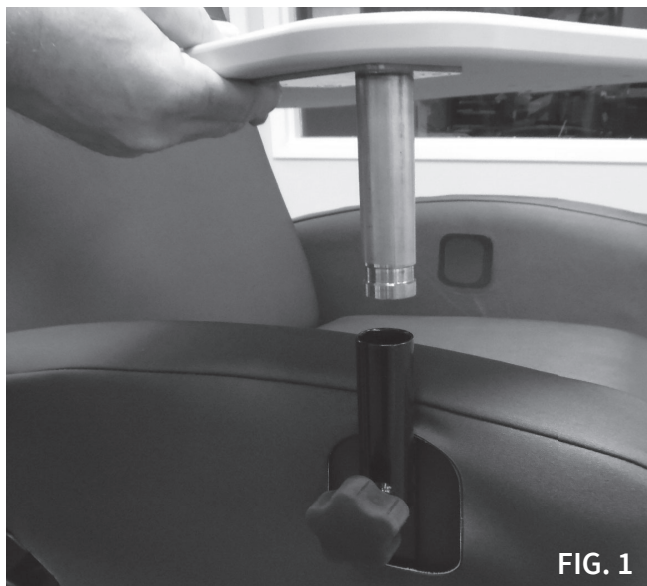

OPERATING INSTRUCTIONS: ATTENDANT

CASTER OPERATION: LOCK/UNLOCK

There are multiple caster and foot types available for this recliner, including, 5" casters with foot plate (rigid, total-lock), 3" casters without foot plate (wheel-lock), and pedestal feet. Total-lock casters lock the wheel and swivel mechanism when pressing down on the tab.

5" CASTERS: RIGID, TOTAL-LOCK

The **front two (2) casters** are rigid casters. They are **NOT** designed to swivel in order to facilitate stable straight steering. In addition, the front locking tabs are always accessible. When the locking tabs are locked down, caster wheels will **NOT** roll.

The **rear two (2) casters** are total-lock casters. They are designed to swivel 360°. When locking tab is locked down, caster wheels will **NOT** roll and caster will **NOT** swivel.

1. **TO LOCK CASTER:** Press down on the wheel tab (A) with the sole of your shoe. Tab will lock wheel into position shown.
2. **TO UNLOCK CASTER:** Press down on the TOP of the wheel tab (B) with the sole of your shoe. Tab will return to position shown, unlocking the wheel.

3" CASTERS



WARNING

Lock casters at all times, except when moving or transporting the chair. always make sure caster brakes are set before and after occupant use.

3. **TO LOCK CASTER:** Press down on the wheel tab (1) with the sole of your shoe. The tab will lock into position shown.
4. **TO UNLOCK CASTER:** Press down on the **TOP** of the wheel tab (2) with the sole of your shoe. The tab will return to the position shown, unlocking the wheel.



WARNING

Always lock the casters when the occupant enters or exits the chair. Unlock casters when moving the chair. Chairs with 3" casters are NOT suitable for patient transport.

NOTE: ALL FOUR (4) 3" casters are wheel-locking only. 3" casters DO NOT have TOTAL and DIRECTIONAL locking.

NOTE: Caster appearance may vary from those pictured here, but operation is the same.

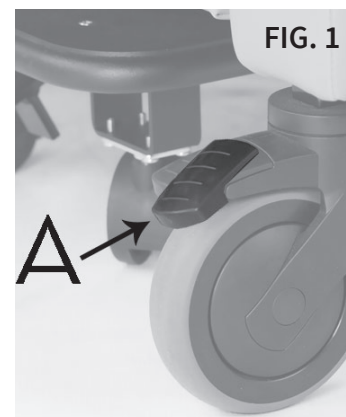


FIG. 1

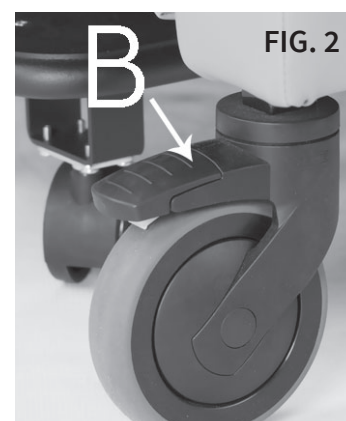


FIG. 2



FIG. 1



FIG. 2

CASTER OPERATION – CONTINUED

PEDESTAL FEET

Pedestal feet are designed for chairs that are intended to remain in a stationary position.

FOOT PLATE OPERATION (OPTIONAL FEATURE)



1. **TO EXTEND:** Using your foot, **PULL OUT** on the foot plate as far as it will travel. Foot plate is now positioned for use. (FIG 1)

2. **TO STORE:** Using your foot, **PUSH IN** on the foot plate until it is returned to the fully stored position. (FIG 2)

IMPORTANT:

- **ONLY GAS-BACK and PRC models equipped with a FOOT PLATE** are suitable for occupant transport (5X*8, 6X*8, 5P*8, and 6P*8). No other models are suitable for occupant transport.
- Prior to transporting an occupant, ensure that the footplate is fully extended and the chair is in the full upright/sitting position.
- **NEVER** transport an occupant with their feet hanging down or without the footplate in place, as this may cause serious injury.
- Chairs with 3" casters **OR** without a footplate are **NEVER** suitable for patient transport.

NOTE: The foot plate option is **ONLY** available for models with 5" casters.



WARNING

- Foot plate **MUST** be used with staff assistance.
- The foot plate for the Standard Verō is rated for a **MAXIMUM** weight capacity of 350 lbs. (158.8 kg).
- The foot plate for the XL Verō is rated for a **MAXIMUM** weight capacity of 500 lbs. (226.8 kg).
- Foot plate can be a tripping hazard if not returned to its stored position after use.
- **ALWAYS** store foot plate when not in use.

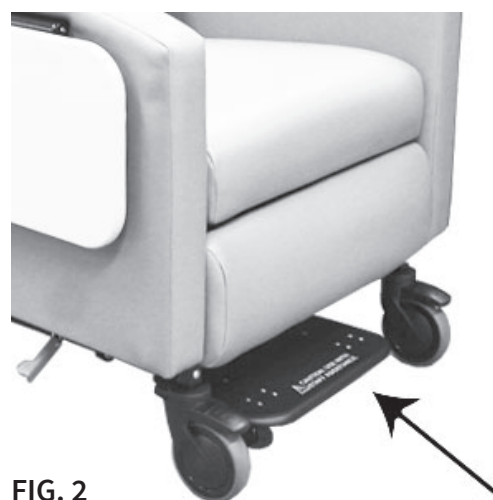


FIG. 2

RECLINE CHAIR (ATTENDANT POSITION, NON-POWER RECLINER MODELS ONLY)

Attendant should stand on the **RIGHT** or **LEFT** side of chair. Lock **ALL** four (4) Casters.

MANUAL ADJUSTMENT CHAIRS (Y MODELS)

1. While occupant is seated in the chair, place one hand on the arm for support and push back on the back to recline (1).

INFINITE GAS SPRING ADJUSTMENT (X MODELS)

*Models with a recline lever (**2A**)

2. To operate the infinite back recline, use one hand to operate the recline lever (**2A**) and the other hand to push on the upholstered back (**2B**) until desired recline angle or maximum recline has been reached.
3. Release recline lever (**2A**) to maintain back position.

IMPORTANT: Do NOT force the chair back up or down without fully extending the recline lever or damage to the chair may occur.



RETURN CHAIR TO UPRIGHT POSITION (ATTENDANT POSITION, NON-POWER RECLINER MODELS ONLY)

Attendant should stand on the **RIGHT** or **LEFT** side of chair. Lock **ALL** four (4) Casters.

MANUAL ADJUSTMENT CHAIRS (Y MODELS)

1. Pull up on the back to return to upright position.
2. Attendant can use one hand to push down on the leg rest (**C**) until it returns to its stored position.



WARNING

Keep hands clear of mechanism to avoid injury. Use hands on face of leg rest **ONLY**.

INFINITE GAS SPRING ADJUSTMENT (X MODELS)

1. While occupant is reclined in the chair, attendant should use one hand to operate the recline lever (**A**), while using the other hand to pull up on the back (**B**).
2. Attendant can use one hand to push down on the leg rest (**C**) until it locks into its stored position.



WARNING

Keep hands clear of mechanism to avoid injury.

Release the recline lever (**A**) once the back has fully returned to the upright position.

NOTE: The recline lever is NOT required to return leg rest to its stored position.



WARNING

Attendant should **NOT** use their foot to return leg rest to its stored position. Damage to the mechanism and upholstery may occur.

FIG. 1



FIG. 2



IMPORTANT: Trendelenburg is a medical patient positioning treatment. It should **ONLY** be used by trained personnel **AND** where indicated by occupant condition.

ACTIVATE TRENDELENBURG POSITION (ATTENDANT ONLY, NON-POWER MODELS ONLY)

Attendant should stand on the **RIGHT** or **LEFT** side of chair.
Lock **ALL** four (4) Casters. Before using Trendelenburg recline on the occupant, it is highly recommended that the attendant be thoroughly trained with its proper use.

1. While occupant is in the chair, place the chair into the fully reclined position (SEE "Recline Chair From Attendant Position").
2. Once chair is fully reclined, attendant can push down on the rear of the Trendelenburg lever (A) with their foot, allowing it to pivot down.
3. Hold the Trendelenburg lever down with your foot and push down on the chair's back (B). This will shift the occupant into the Trendelenburg position. Release Trendelenburg lever.

NOTE: The chair does **NOT** lock in the Trendelenburg position.

IMPORTANT: Chair must be in the fully reclined position **BEFORE** occupant can be placed into Trendelenburg.



WARNING

DO NOT leave occupant in Trendelenburg angle unattended.

RETURN CHAIR TO RECLINE POSITION (ATTENDANT ONLY)

Attendant should be positioned on the **RIGHT** or **LEFT** side of chair.

NOTE: Pushing down on the seat (B) is recommended for maximum leverage.

1. To return chair to the recline position, push down on seat (recommended) or lift up on chair back.

NOTE: It is not necessary to press the Trendelberg lever.


FIG. 1



FIG. 2




FIG.1

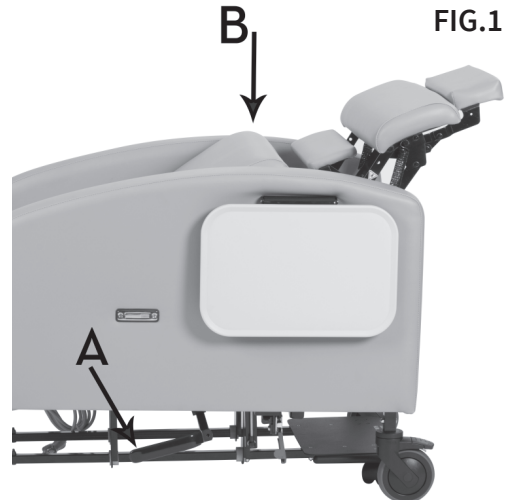



RECLINE CHAIR (ATTENDANT POSITION, VERO CARE CLINER PRC MODELS ONLY)

1. Attendant should stand on the side of the chair where the switch panel is located. Lock **ALL** four (4) Casters. Some chairs have one or two switch panels depending on model. An optional pendant is available.
2. Attendant should check for obstructions and that occupant's hands and feet are clear of the chair mechanism before operating the power recline.
3. Press the down button on the switch or pendant to lower occupant recline angle (2 or 3).
4. Do not try to push the chair back manually to adjust the recline angle.

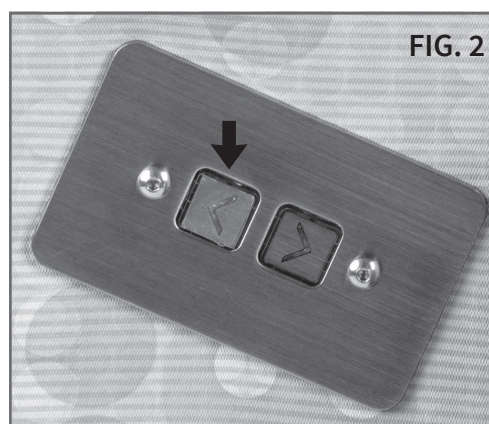

RETURN CHAIR TO UPRIGHT POSITION (ATTENDANT POSITION, VERO CARE CLINER PRC MODELS ONLY)

1. Attendant should stand on the side of the chair next to a switch panel. Lock **ALL** four (4) Casters.
2. Attendant should check for obstructions and that occupant's hands and feet are clear of the chair mechanism before operating the power button.
3. Press the up button on the switch or pendant to raise occupant recline angle (2 or 3).

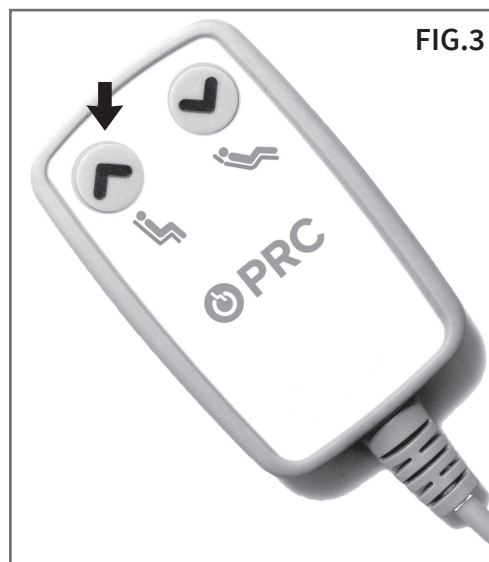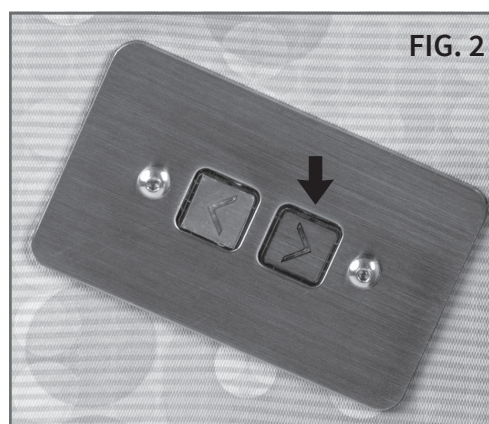

ACTIVATE TRENDELENBURG POSITION (OPTIONAL FEATURE, ATTENDANT ONLY, VERO CARE CLINER PRC MODELS ONLY)



Attendant should stand on the **side of the chair next to a switch (or use pendant) and trendelenburg lever**. Lock **ALL** four (4) Casters. Before using Trendelenburg recline on the occupant, it is highly recommended that the attendant be thoroughly trained with its proper use.

1. Attendant should remove obstructions and check occupant's hands and feet are clear of the chair mechanism before operating the power button.
2. Press the down button to lower the occupant recline angle all the way down.
3. Once chair is fully reclined, push down on the Trendelenburg lever with foot.
4. Hold the Trendelenburg lever down and push down on the chair's back. This will shift the occupant into the Trendelenburg position. Release Trendelenburg lever.

Do not leave patient in Trendelenburg angle unattended.



Do not leave occupant in Trendelenburg angle once medical emergency treatment is finished.

To take an occupant out of Trendelburg please refer to page 21, under "Return Chair to Recline Position (Attendant Only)".

SWING-ARM OPERATION (ATTENDANT ONLY)

Attendant should stand on the **RIGHT** or **LEFT** side of chair to open swing arms. Lock **ALL** four (4) Casters.

TO OPEN: Press down on red latch handle to unlock swing-arm.



- **DO NOT** leave occupant unattended when any swing-arms are unlatched.
- An occupant should **NOT** be transported with the swing-arms open. **After transferring an occupant, the swing-arm should be securely latched closed.**

TO CLOSE: Push the swing-arm firmly against the frame. The latch will automatically engage with an audible "click".



- Make sure the swing-arm latches are locked when the swing-arms are in the closed (latched) position. Test by pulling on arms. The arms should not swing open if properly locked.

IMPORTANT: Swing-arms pivot out 180°. When both arms are pivoted fully back, chair width is reduced to 34.5" to transport chair through narrow doorways. The swing-arm can be pivoted back in order to get a wheel chair or gurney close to the chair.

1. Unlock both swing-arms and rotate them to the rear of the chair.
2. Stand behind the chair to maneuver the chair through the doorway.



- **DO NOT** recline chair with any swing-arms in the 180° position.
- Evaluate the position of the chair in comparison to other objects near it. While the arms are open, ensure that there is enough clearance between the arm and other objects, so that there is no interference with its functionability and to prevent the possibility of damage to the chair.
- Keep the chair away from other furniture and loose objects to prevent damage to the chair.
- Keep chair away from building walls, columns, and structural objects to prevent damage during recline operations.



LATCH HANDLE

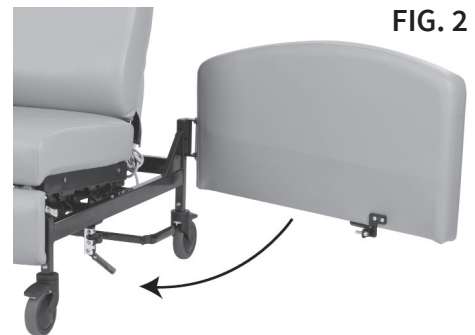


FIG. 2



FIG.3



FIG.4

PATIENT TRANSFERS INTO CHAIR (SWING-ARM ONLY)

Attendant should stand on the **RIGHT** or **LEFT** side of chair.



Lock all casters before occupant enters or exits the chair.

1. Lock **ALL FOUR (4)** casters.
2. Move the chair back into a seated or reclined angle that matches the occupant transfer angle.
3. Unlatch one swing-arm and rotate to the 180° position at the back of the chair.
4. Position a gurney or wheel chair next to the chair on the open swing-arm side.
5. Transfer the occupant to the chair following facility safe patient handling policies.
6. Close the swing-arm and ensure the latch is locked.



- **DO NOT** leave the swing-arm open after the occupant is transferred to the chair.
- When closing the swing-arm, make sure the occupant's extremities are clear of the swing-arm.
- When closing the swing-arm, make sure any foreign objects are clear of the swing-arm and latch.



FIG. 1



FIG. 2

SIDE TABLE OPERATION (OPTIONAL FEATURE)

STANDARD SIDE TABLES

1. **TO RAISE TABLE:** Grasp the center of the table and gently raise until it locks in place, level with the floor. The table will automatically lock into place when released.
2. **TO LOWER TABLE:** Grasp the table on both sides near the arm, raise and lower down in a single movement.

PREMIUM SIDE TABLES

3. **TO RAISE TABLE:** Grasp the center of the table and gently lift until it locks in place. The side-table will lock into place with an audible "click" once fully extended.
4. **TO STORE:** Press up on the lever located under the side-table and lower to its stored position.



- **DO NOT** lean or sit on the side tables.
- **DO NOT** use the table for support or assistance when exiting or entering the chair.
- Keep hands and objects clear of the moving parts of the table mechanism.

IMPORTANT: Side-tables are rated for a **MAXIMUM** weight capacity of 20 lbs (9.0 kg).

FIG. 1

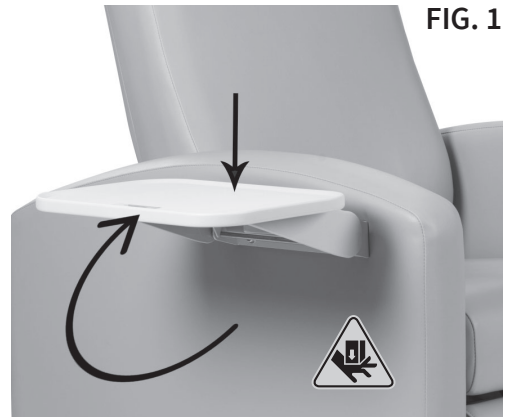


FIG. 2


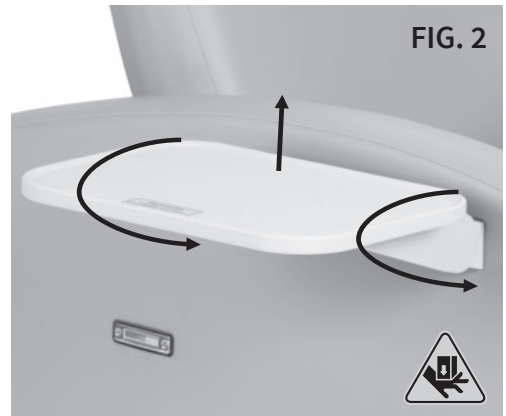


FIG. 1



FIG. 2

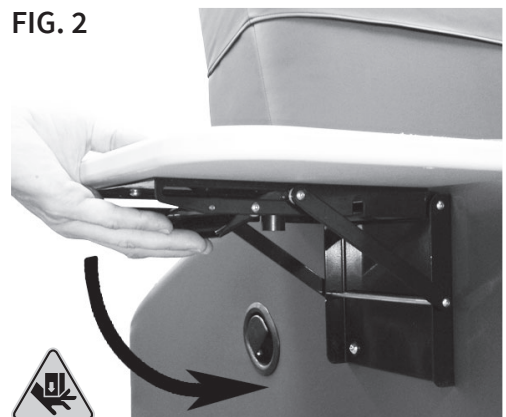

PIVOT TABLE OPERATION (OPTIONAL FEATURE)

POSITION TABLE

1. Loosen the adjustment knob **(A)** and swing away or place in the "lap" position.
2. Tighten adjustment knob **(A)** to secure position.

REMOVE TABLE

3. Loosen the adjustment knob (A) two full turns and lift up on pivot-table.

- **DO NOT** lean or sit on pivot-tables.
- **DO NOT** use table for support or assistance when exiting or entering the chair.
- Keep hands and objects clear of the moving parts of the table mechanism.
- Make sure pivot table is clear of patient at all times, during ingress, egress, or recline.



IMPORTANT: Pivot-tables have been rated for a MAXIMUM weight capacity of 20 lbs. (9.0 kg)

Loosen the adjustment knob **(A)** two full turns and lift up on pivot-table.



The pivot table should be secured by knob (A) after every adjustment. The path of the pivot table should be clear whenever using the swing-arm function or positioning the patient.

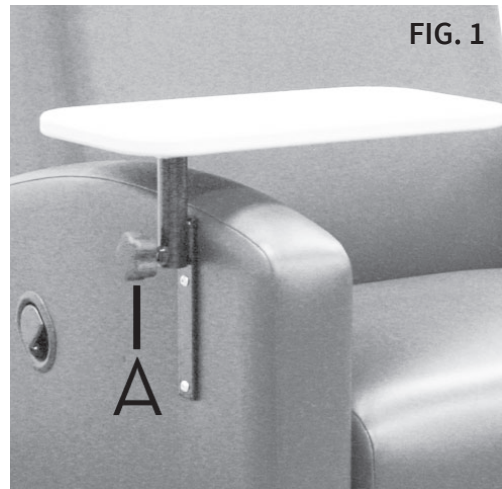


FIG. 1

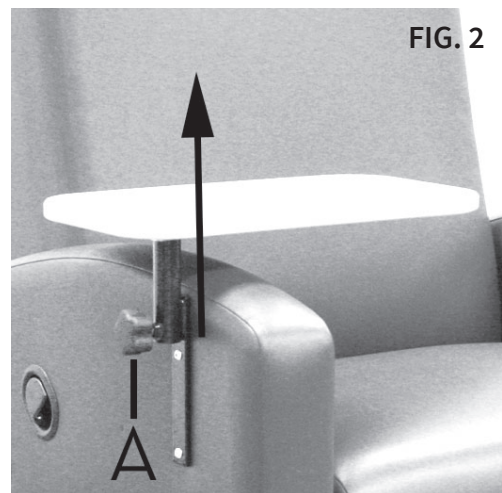


FIG. 2

OPERATING INSTRUCTIONS: OCCUPANT

RECLINE WHILE IN THE SEATED POSITION (NON-POWER RECLINER MODELS ONLY)

MANUAL ADJUSTMENT AND GAS BACK CHAIRS

1. While seated in the chair, with **ALL** four (4) casters locked, place hands on each chair arm and push back while applying pressure to the back with shoulders, to activate the mechanism into the desired position.

INFINITE GAS SPRING ADJUSTMENT

2. To operate the infinite back positioning, lock ALL four (4) casters, pull back on the recline lever and adjust the upholstered back angle by pushing back with your body until desired angle has been reached.
3. Release the recline lever (A) when you have achieved the desired angle to lock the back into position.

- **DO NOT** stand or sit on the leg rest.
- **DO NOT** place hands, legs, or feet under seat, mid-ottoman, or leg rest.
- Stay clear of recline mechanism when operating chair.



FIG. 1

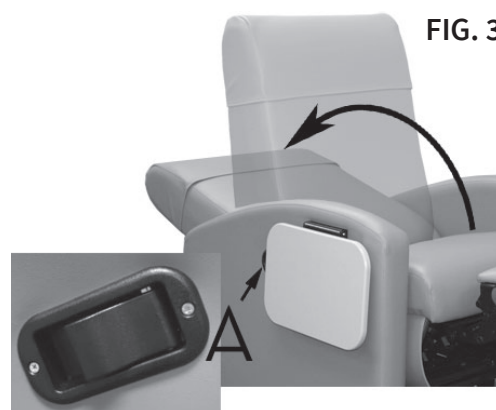


FIG. 3

RETURNING TO SEATED POSITION (NON-POWER RECLINER MODELS ONLY)

MANUAL ADJUSTMENT AND GAS BACK CHAIRS

1. To return the back (B) to the full upright position, lock ALL four (4) casters, grasp chair arms (A) with both hands and pull body forward.
2. Press down on the leg rest (C) with legs and feet until it is stored.



WARNING

Make sure all objects, hands and feet are clear of all mechanisms before lowering leg rest.

INFINITE GAS SPRING ADJUSTMENT

For models with recline lever

3. To return the back (B) to the full upright position, pull back on either of the recline levers (D) and lean body forward. Release the recline lever once the back has fully returned to the upright position.
4. Press down on the leg rest (C) with legs and feet until it is stored.

NOTE: The recline lever does NOT have to be used to return the leg rest to its stored position.



WARNING

Make sure all objects, hands and feet are clear of all mechanisms before lowering leg rest.

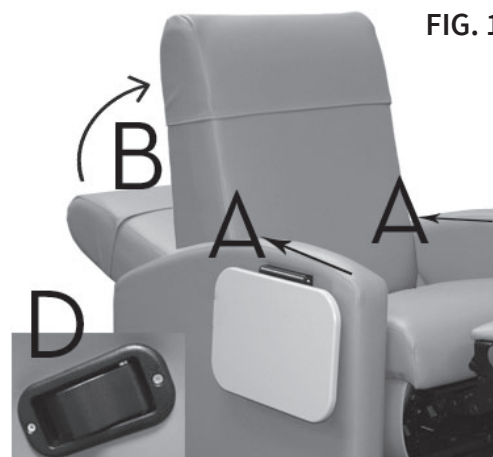


FIG. 1



FIG. 2

RECLINE WHILE IN THE SEATED POSITION (VERO CARE CLINER PRC MODELS ONLY)

With **ALL** four (4) casters locked, push down on the recline button until desired position is met (2 or 3).



- Do not stand or sit on leg rest.
- Do not place hands, legs, or feet under seat, mid ottoman, or leg rest.
- Stay clear of recliner mechanism when operating chair.
- Check for and remove any obstructions from recliner path prior to operating recline switch.



FIG. 1

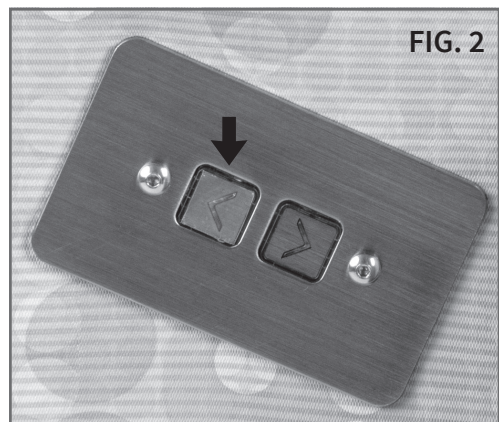


FIG. 2



FIG. 3

RETURNING TO SEATED POSITION (VERO CARE CLINER PRC MODELS ONLY)

With **ALL** four (4) casters locked, push down on the incline button until desired position is met (2 or 3).



- Do not stand or sit on leg rest.
- Do not place hands, legs, or feet under seat, mid ottoman, or leg rest.
- Stay clear of recliner mechanism when operating chair.
- Check for and remove any obstructions from recliner path prior to operating recline switch.



FIG. 2


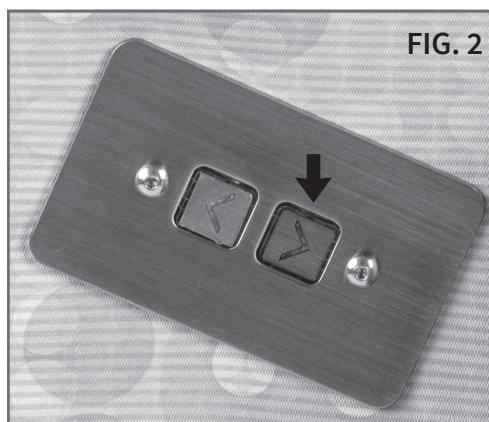


FIG.3



HEAT/HEAT & MASSAGE OPERATION (OPTIONAL FEATURE)

Control is located on the inside of right arm of chair. (Right is determined – as if sitting in the chair)

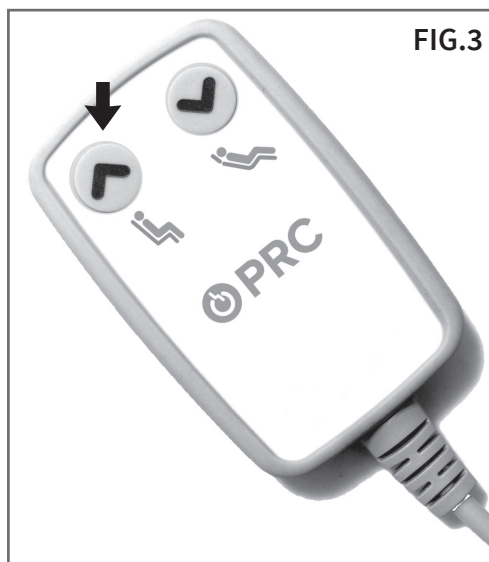

HEAT
MASSAGE

OR



HEAT ONLY

HEAT

*Heating elements are located in the seat & the seat-back of chair

To operate, push **HEAT** button - See indicator light on switch

3 Lights = High Heat/Bright Light

2 Lights = Medium Heat/Medium Light

1 Light = Low Heat/Dim Light

No Light = HEAT OFF

Allow 5 – 8 minutes for seat-back and seat to warm to desired setting.

Heat will automatically shut off after approximately 60 minutes. (Timer resets each time switch is pressed).

MASSAGE

* The massage option uses four (4) separate motors located in the backrest of the chair. Two in the lower backrest, and two in the middle (upper) backrest.

To operate, push **MASSAGE** button

1X = Lower Back/Low Intensity

2X = Lower Back/High Intensity

3X = Upper & Lower Back/Low Intensity

4X = Upper & Lower Back/High Intensity

5X = Alternating Upper & Lower Back

6X = MASSAGE OFF

Massage will automatically shut off after approximately 15 minutes. (Timer resets each time switch is pressed).

HEAT/HEAT & MASSAGE OPERATION – CONTINUED

CLEANING:

1. Unplug power cord from outlet.
2. Clean switch, wiring, and power pack (all located under the seat frame) with a **DAMP CLOTH ONLY**.

TROUBLESHOOTING:

1. If there is no heat, massage, or flashing light on the switch, check the power cord is plugged into the wall outlet AND power pack unit under the chair.
2. If the switch displays a flashing light, disconnect from wall, check all accessible wire connectors under the chair for possible loose connections, then replug into the wall and test again.
3. If the system still does not work, contact Champion Customer Service at 352-854-2929.

CORD STORAGE:

IMPORTANT: For models with Heat (HT), Heat & Massage (HM), and Power Recline

1. When heat and massage will not be used, the power cord should be coiled and stored in the "Hook and Loop" fastener provided on the back of the chair.
2. When the chair is moved to another location, store the power cord.
3. To prevent cord damage or tripping, store the power cord.



GENERAL MAINTENANCE

GAS CYLINDER OPERATION

DO NOT ATTEMPT TO ADJUST CYLINDER.

The Gas Cylinder is preset during manufacturing. **DO NOT** adjust the gas cylinder without contacting Champion Customer Service.

- Cylinder adjustment will not make the chair operate easier or more smoothly.
- Do not remove the cylinder. You will **NOT** be able to be reinstall it without special tools.

GENERAL CARE & CLEANING

- Periodically inspect tightness of all screws, bolts, nuts, or other fasteners every year.
- Lubricate pivot points on the recline mechanism with a lubricant approved by your facility every year.
- If equipped, periodically position the chair back into full recline position to keep the gas cylinder lubricated.

Champion Manufacturing, LLC's full-line of products are durable and reliable when properly cared for.

All Champion products should be:

1. Cleaned
2. Disinfected (per facility policy)
3. Rinsed
4. Allowed to air dry

Note: Disinfecting a product is not the same as cleaning the product. Disinfectants alone will not provide adequate cleaning. They do not have grease or oil cutting properties to remove grime, hair, or skin oils. The appearance, feel, and performance of your upholstery may diminish if not cleaned properly.

CLEANING

Champion chairs should be cleaned with mild soap and water solution and a damp cloth on a regular basis. Avoid harsh detergents or chemicals that could damage the upholstery or finish of your chair. If the upholstery is disinfected with chemicals or bleach mixtures, the chair **MUST** be wiped off using only clean water on a damp cloth and then air dried. Failure to rinse upholstery with clean water can result in build-up of residue. Over time residue can dry out the upholstery and cause changes to the look and feel of the upholstery, leading to cracking. When cleaning or disinfecting the inside of a swing arm, it is important to allow the arm to air dry before closing the arm or wipe with a clean, dry cloth before closing. Moisture between the arm and the frame could cause the frame to rust.

Please refer to instruction labels or tags included with your product for complete care and cleaning instructions. Retain information on the label or tag for future use.

Additional information for cleaning products with Champion Manufacturing, Inc. selection of vinyls can be found on our website at: championchair.com/cleaning-instrucitons/

For custom vinyl, please refer to the manufacturer's instructions.



Use caution cleaning in and around mechanisms. Keep hands clear of pinch points and metal edges or injury may occur. Disconnect power cord (chairs with HM and/or HT, or Power Chair option) and optional rechargeable battery before cleaning this product. NEVER clean or maintain your chair while it is occupied or injury may occur. Do not allow any liquid to penetrate electrical components. NEVER use a high pressure cleaner, wash tunnel, or "hose down" method to clean this product. Liquid may cause damage to the product and void your warranty.

OPTIONAL BATTERY

The battery option works with the power recline actuator to permit continued function during a general power failure. It does not provide power to Heat and Massage functions. The battery turns ON automatically when you receive a new chair and plug in the power cord. The controller automatically recharges the battery when needed.

When the power to the facility or room circuit fails, the battery stays ON to allow recliner movement on demand. When the power cord is disconnected from the outlet, the battery stays ON. A power cord could be disconnected several days before you are aware of the situation. If Power Recline stops, check the power cord is plugged into an outlet.

The battery is located at the rear of the chair on the righthand side of the mounting plate. The battery does not require periodic service. If a chair will be stored or transported to a new location, the battery can be turned OFF by pressing and holding the OFF button for a minimum of 3 seconds to prevent discharge. The battery will last longer if kept in a charged state while the power cord is plugged into an outlet. The battery warranty is 1 year. To turn on the battery, plug in the chair power cord or press and hold the ON button 1 second. Plug in the chair for 24 hours every 6 months of inactive storage to permit the controller to restore full battery charge. This procedure enhances battery life. Battery capacity after 3 months storage is 79%. Battery capacity after 6 months storage is 58%.

The battery has a status indicator LED light near the buttons on the case.

LED Color	Condition
Green – Continuous ON	Charged over 80% capacity
Green – Dimming 1 sec/1 sec	Charging under 80% capacity
Green – Dimming 0.5 sec/4 sec	Charging above 25% capacity
Orange – Dimming 0.5 sec/4 sec	Low Battery below 25% capacity
Orange – Continuous ON	Battery Failure
No Light	Battery OFF or in Protection circuit mode with less than 20% capacity

The following list defines Protection Circuit modes that turn OFF the battery:

Protection Type	Cause	Time Period
Discharge, Over Current	Current > 7.5A	>10 Seconds
Discharge, Low Voltage	Voltage <16.0 VDC	>15 Seconds
Standby, Low Voltage	Voltage <22.5 VDC	>10 Minutes



IMPORTANT: ALWAYS REFER TO THE WEIGHT CAPACITY LABEL ON YOUR CHAIR.

In all cases the labeling on the chair at the time of delivery indicates the correct rating for your chair – Weight rating should not be exceeded!

SPECIFICATIONS



5X00 shown

5X/5Y/6X/6Y: Verō Care Cliner	
Seat Height to Floor W/ Pedestal Feet	19.25" (48.9 cm.)
Seat Height to Floor W/ 3" Casters	20.5" (52.1 cm.)
Seat Height W/ 5" Casters	22.75" (57.8 cm.)
Seat Height to Foot plate (5" Casters Only)	19.5" (49.5 cm.)
Seat Width – Standard Size (arm to Arm)	22.5" (57.2 cm.)
Seat Width – XL Size (Arm to Arm)	26.5" (67.3 cm.)
Overall Height w/ Pedestal Feet	44.75" (113.7 cm.)
Overall Height w/ 3" Casters	46" (116.8 cm.)
Overall Height w/ 5" Casters	48.25" (122.26 cm.)
Overall Width w/out table – no swing arms or swing arms closed – Standard	29.5" (74.93 cm.)
Overall Width w/out table – no swing arms or swing arms closed – XL Size	34" (86.36 cm.)
Overall Width – swing arms Open 90°	+35.75" (90.81 cm.)
Overall Width – swing arms Open 180°	+28.5" (72.39 cm.)
Back Height Above Seat	29" (73.7 cm.)
Seat Depth	22" (55.9 cm.)
Weight – Standard Size	104 lbs. (47.2 kg.)
Weight – XL Size	122 lbs. (55.3 kg.)
Weight w/ Footplate – Standard Size	114 lbs. (51.7 kg.)
Weight w/ Footplate – XL Size	132 lbs. (59.9 kg.)
**All Above Chair Weights Exclude Options	
Maximum Weight Capacity – Standard Size	350 lbs. (158.8 kg.)
Maximum Weight Capacity – XL Size	500 lbs. (226.8 kg.)

IMPORTANT: Patient Weight should be evenly distributed.



IMPORTANT: ALWAYS REFER TO THE WEIGHT CAPACITY LABEL ON YOUR CHAIR.

In all cases the labeling on the chair at the time of delivery indicates the correct rating for your chair – Weight rating should not be exceeded!

SPECIFICATIONS



6P43 shown with urethane arm option"


5P/6P: Verō Care Cliner PRC (Power Recliner Chair)	
Seat Height to Floor W/ Pedestal Feet	20.25" (51.4 cm.)
Seat Height to Floor W/ 3" Casters	20.75" (52.7 cm.)
Seat Height W/ 5" Casters	23.75" (60.3 cm.)
Seat Height to Foot plate (5" Casters Only)	20.75" (52.7 cm.)
Seat Width – Standard Size (arm to Arm)	22.5" (57.2 cm.)
Seat Width – XL Size (Arm to Arm)	26.5" (67.3 cm.)
Overall Height w/ Pedestal Feet	44" (111.8 cm.)
Overall Height w/ 3" Casters	44.5" (113 cm.)
Overall Height w/ 5" Casters	47.5" (120.7 cm.)
Overall Width w/out table – no swing arms or swing arms closed – Standard	29.5" (74.93 cm.)
Overall Width w/out table – no swing arms or swing arms closed – XL Size	34" (86.36 cm.)
Overall Width – swing arms Open 90°	+35.75" (90.81 cm.)
Overall Width – swing arms Open 180°	+28.5" (72.39 cm.)
Back Height Above Seat	28.75" (73 cm.)
Seat Depth	23.5" (59.7 cm.)
Weight – Standard Size	140 lbs. (63.5G.)
Weight – XL Size	158 lbs. (71.7 kg.)
Weight w/ Footplate – Standard Size	150 lbs. (68 kg.)
Weight w/ Footplate – XL Size	168 lbs. (76.2 kg.)
**All Above Chair Weights Exclude Options	
Maximum Weight Capacity – Standard Size	350 lbs. (158.8 kg.)
Maximum Weight Capacity – XL Size	500 lbs. (226.8 kg.)

IMPORTANT: Patient Weight should be evenly distributed.

VERO CARE CLINER OPTIONS

HEAT/HEAT & MASSAGE

HM Heat & Massage
HT Heat ONLY
Factory Installed Only

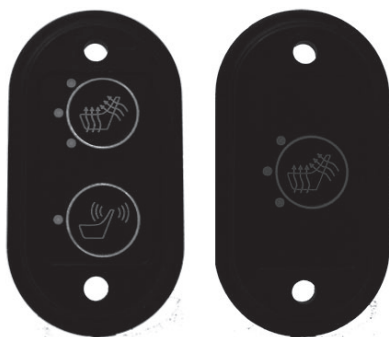

PREMIUM SIDE TABLE

Available on Left, Right or Both
Sides
(Wood Finish Option also
available)



PREMIUM SIDE TABLE

Available on Left, Right or Both
Sides
(Wood Finish Option also
available)



PIVOT TABLE

Available for Left, Right, or Both
Sides



ACCESSORY HOLDER

AHAccessory Holder
Available for Left, Right, or Both
Sides



IV POLE & ATTACHMENT

IVIV Pole & Attachment
(Available for Left or Right or Both
Sides)



ARM REST COVERS

Available for all table and arm
configuration options



URETHANE ARM CAP

URUrethane Arms
UPUrethane Arms with Push
Handle



HEADREST PILLOW & COVER SET

NP Headrest Cover & Pillow Set



Visit our website (ChampionChair.com) to view our full line of medical furnishings and stretcher-chairs.

Additional copies of this manual and other product documents are available for download via the resources section of our website.

SPECIFICATIONS SUBJECT TO CHANGE

While we endeavor to maintain consistent products, due to conditions beyond our control, specifications are subject to change without notice. We reserve the right to add or delete products at any time and without prior notice. Always provide your product's specific serial number when ordering any replacement parts. When in doubt, contact a Champion representative (1-800-237-3377) for further information.



Information contained in this document is based on the latest product data available at the time of printing. Photography, artwork, text and specifications are subject to change. Photographs may show optional items. Champion Manufacturing Inc. reserves the right to make changes to products, materials, options, and/or specification at any time without notice or obligation. Always provide your product's specific serial number when ordering replacement parts. Contact Champion direct for additional information and the latest specifications.